



28



29



30



31



32



33



34



35



36



37




38



39



40

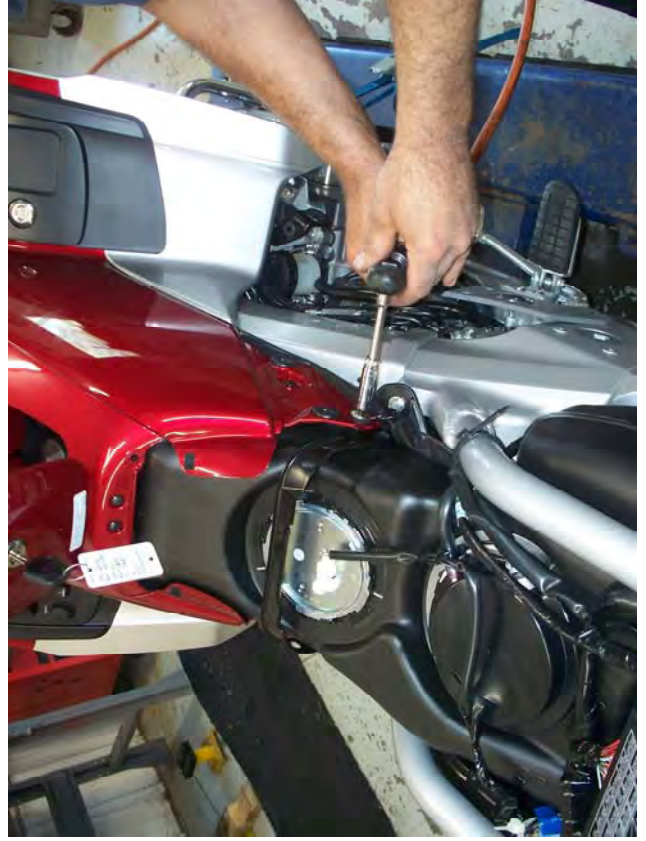

41



42



43



44



45



46



47




48



49


TIRE PRESSURE MONITOR SYSTEM DISABLE WIRING DIAGRAM A-100-679

REMOVE THE RIGHT FRONT FAIRING POCKET TO ACCESS THE TPMS CONTROL MODULE. LOCATE THE GREEN WIRE AND THE WHITE/YELLOW WIRE ON THE TPMS MODULE WIRING HARNESS PIGTAIL. INSTALL ONE "T" TAP CONNECTOR ON THE GREEN WIRE AND ONE "T" TAP CONNECTOR ON THE WHITE/YELLOW WIRE. PLUG IN THE PROVIDED JUMPER WIRE TO THE "T" TAPS. REPLACE THE WIRING TO IT'S ORIGINAL LOCATION. REPLACE THE FAIRING POCKET.

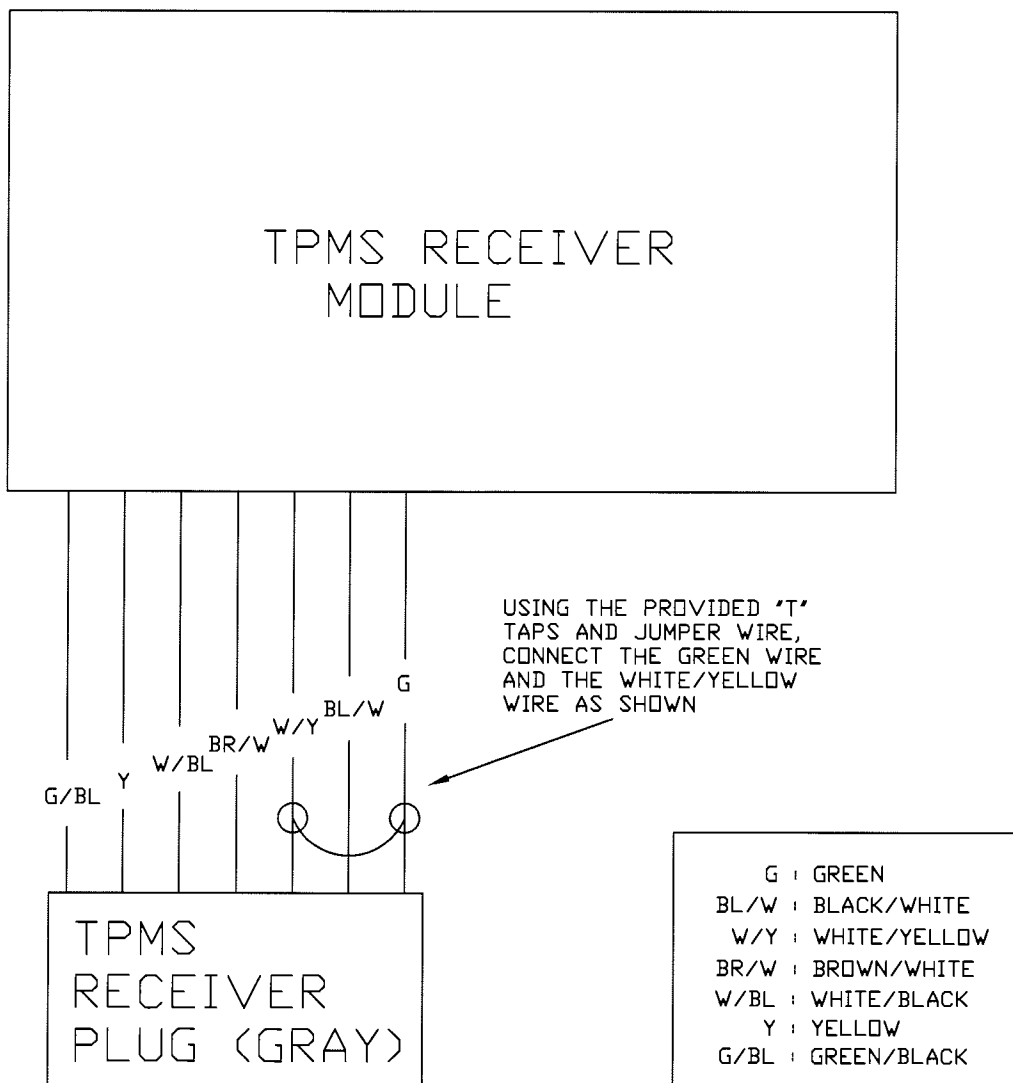

TPMS

COMPONENT LOCATION

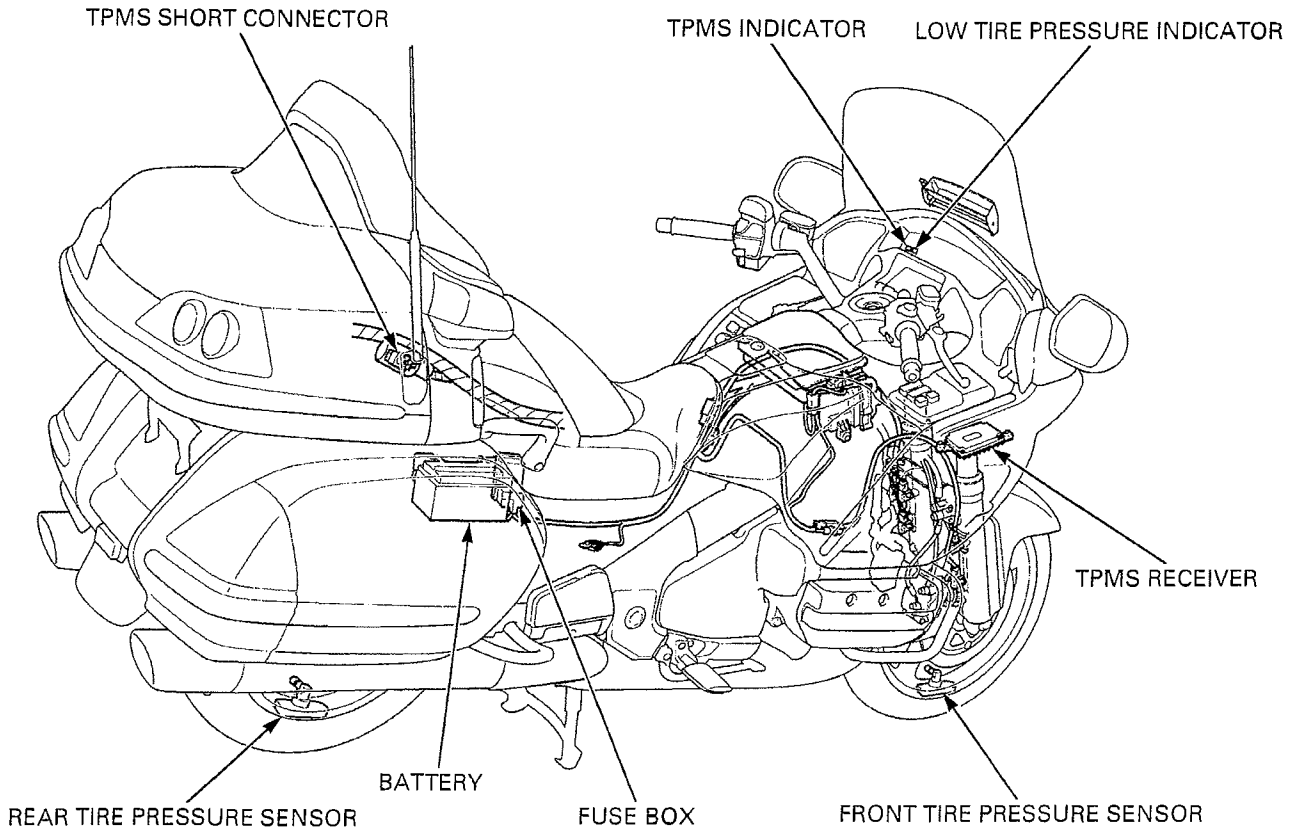

SYSTEM DIAGRAM

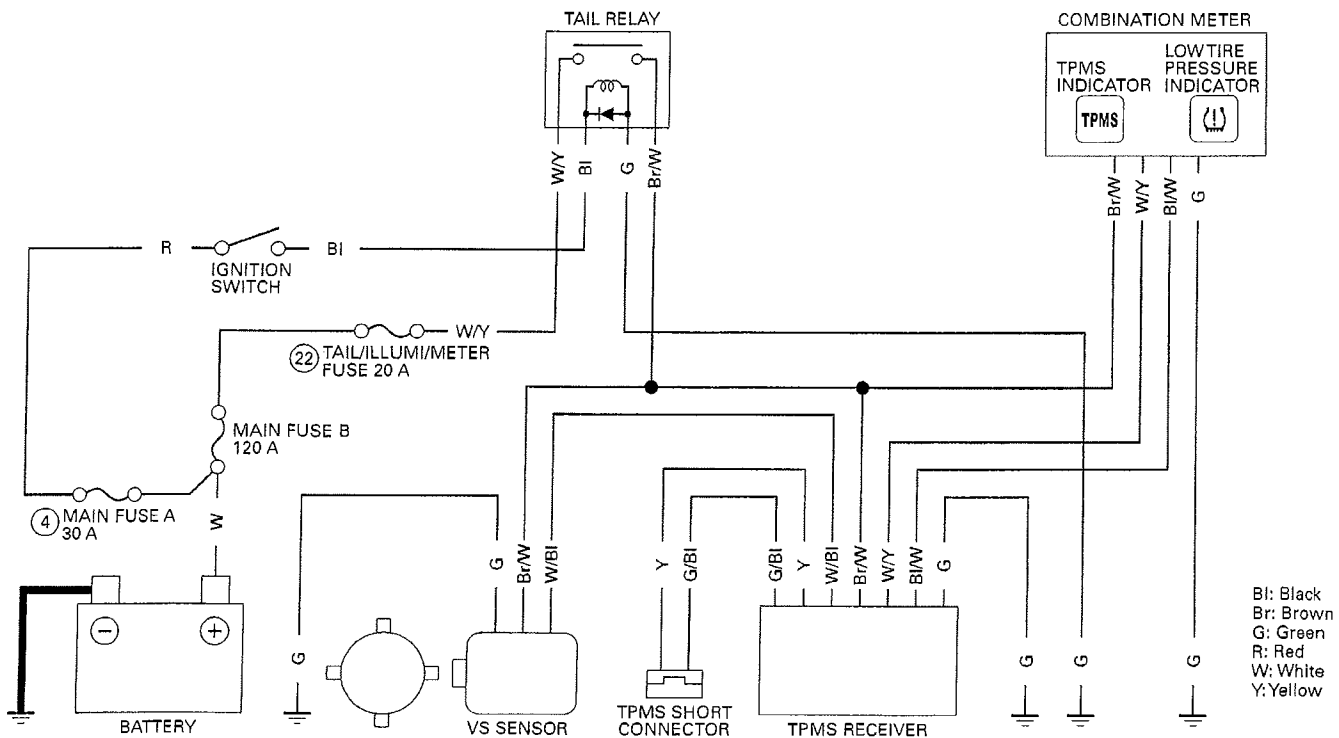


DIAGRAM #A-100-735

2006 AND NEWER GL 1800 DRIVE SHAFT SPACER INSTALLATION DIAGRAM



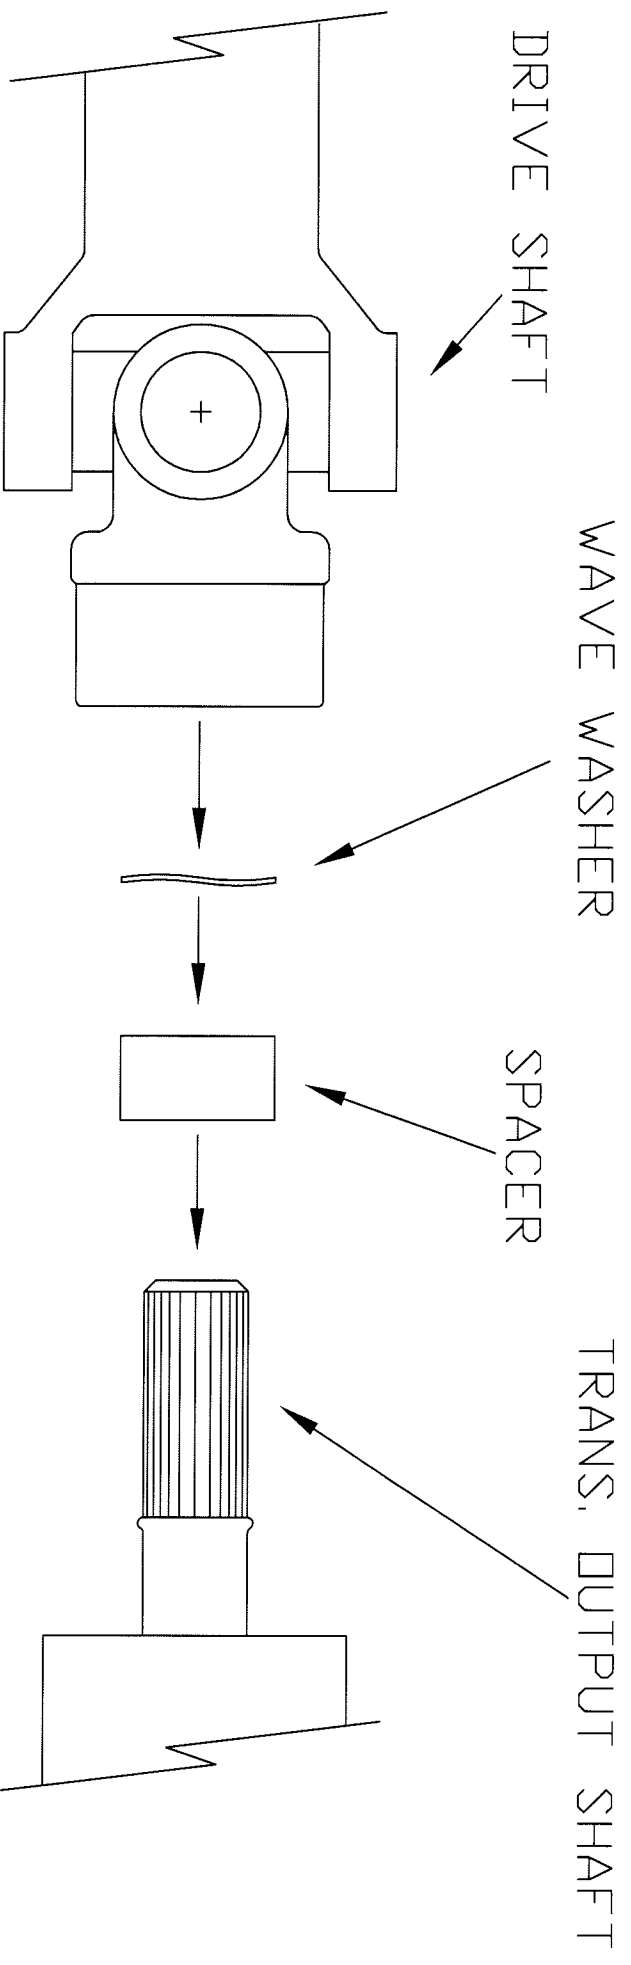


DIAGRAM #A-100-736

HT 1800 AUX. FUEL TRANSFER
PUMP WIRING DIAGRAM

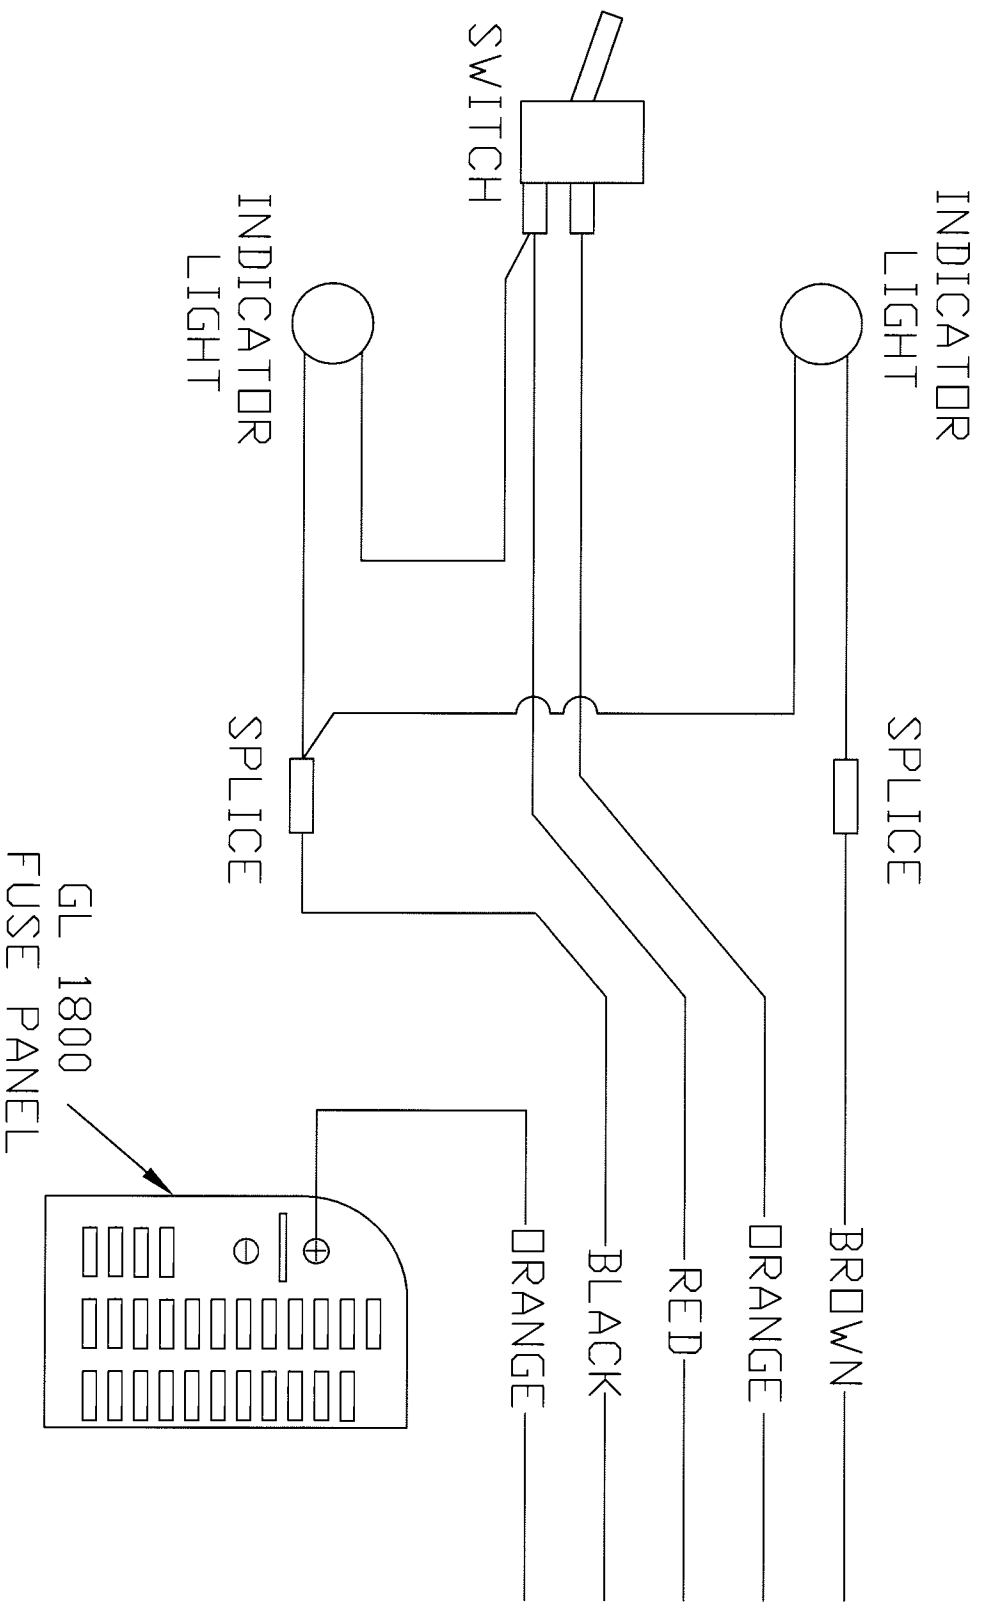


REPLACE 5A. ACCY FUSE WITH
SUPPLIED 15A FUSE

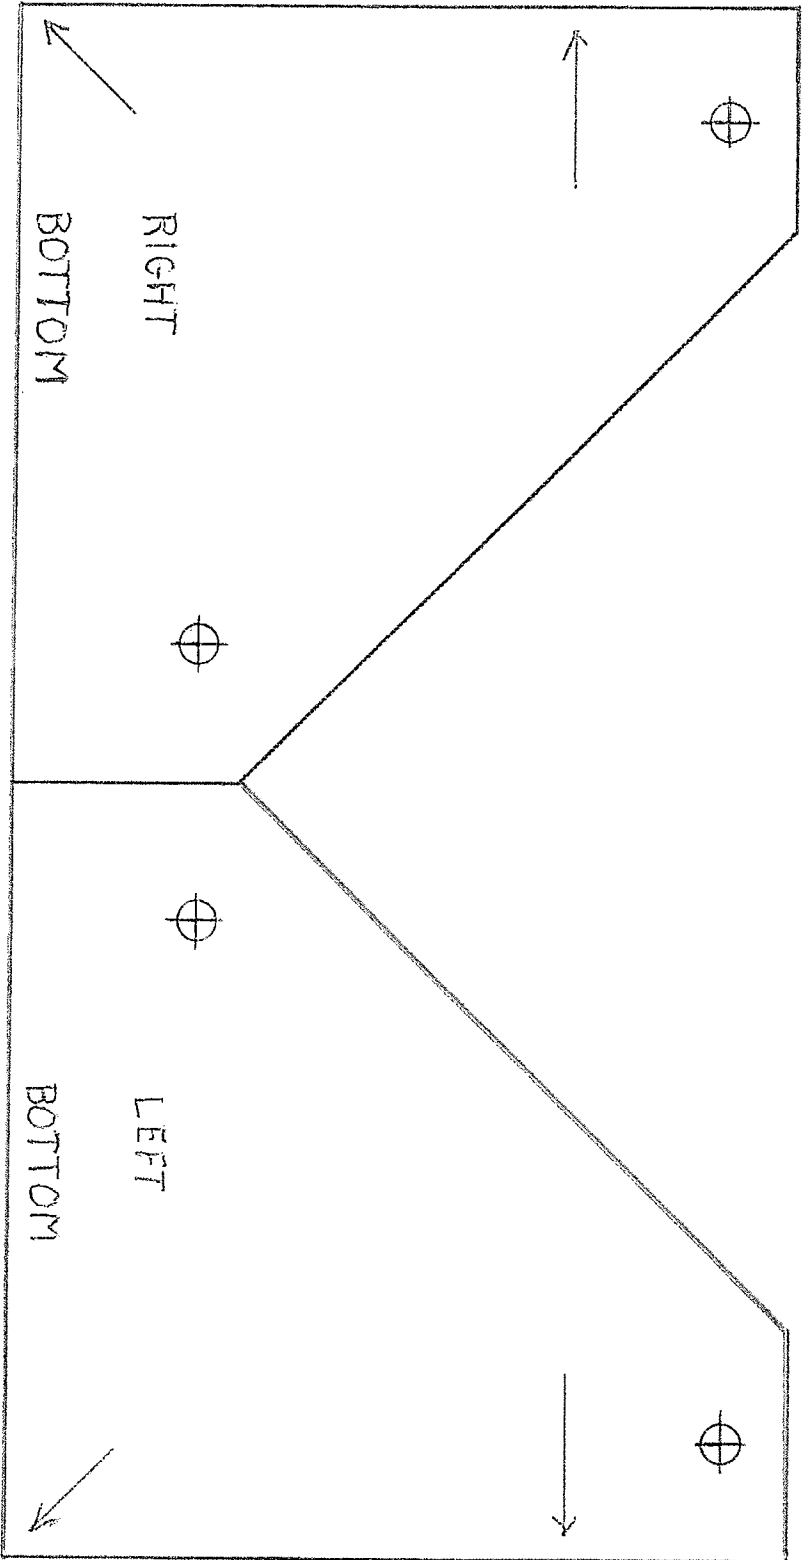


2006 GL 1800 AMPLIFIER RELOCATION HOLE TEMPLATE

A-100-818-D

HT 1800 TRUNK & LIC. PLATE
LIGHT CONNECTION DIAGRAM
(WITHOUT OPTIONAL TRUNK LIGHT)

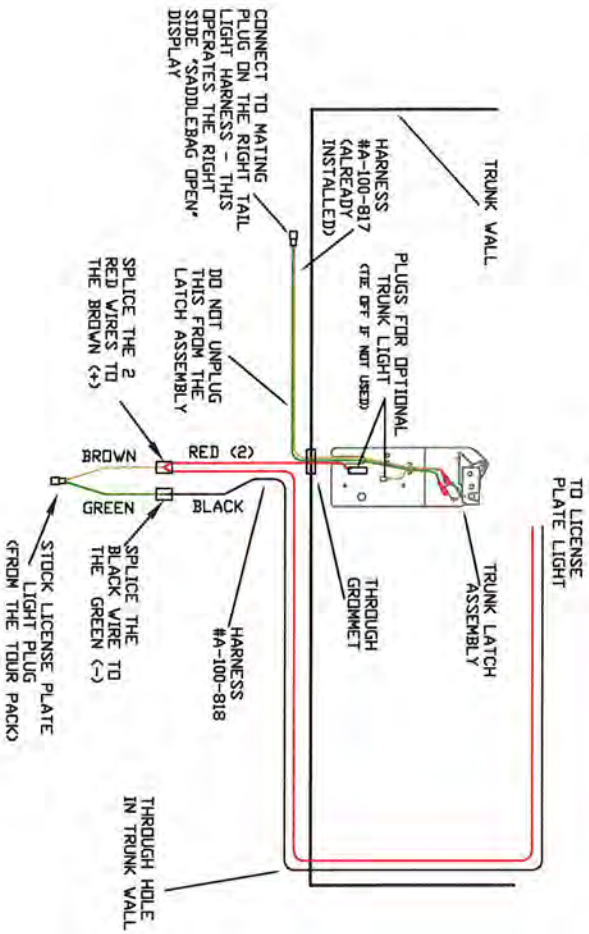

HT 1800 TRUNK & LIC. PLATE
LIGHT CONNECTION DIAGRAM
(WITH OPTIONAL TRUNK LIGHT)

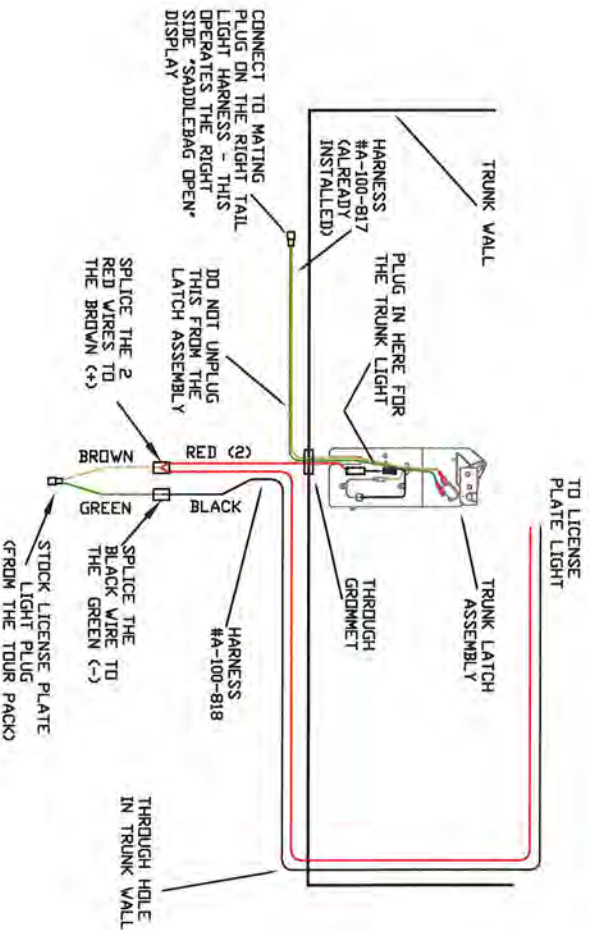

A-100-925-D

2012 HT 1800 TAIL LIGHT WIRING DIAGRAM

